
Miltech Simulations-Microsoft C-17 Globemaster III

Configuration Display

Caution
Please note that starting on Version Number V1.1.15, aggressive performance optimizations have been made, including limiting pages on PFD and MFDs, and mirroring both copilot's FMCs. More information here: NOTAMs

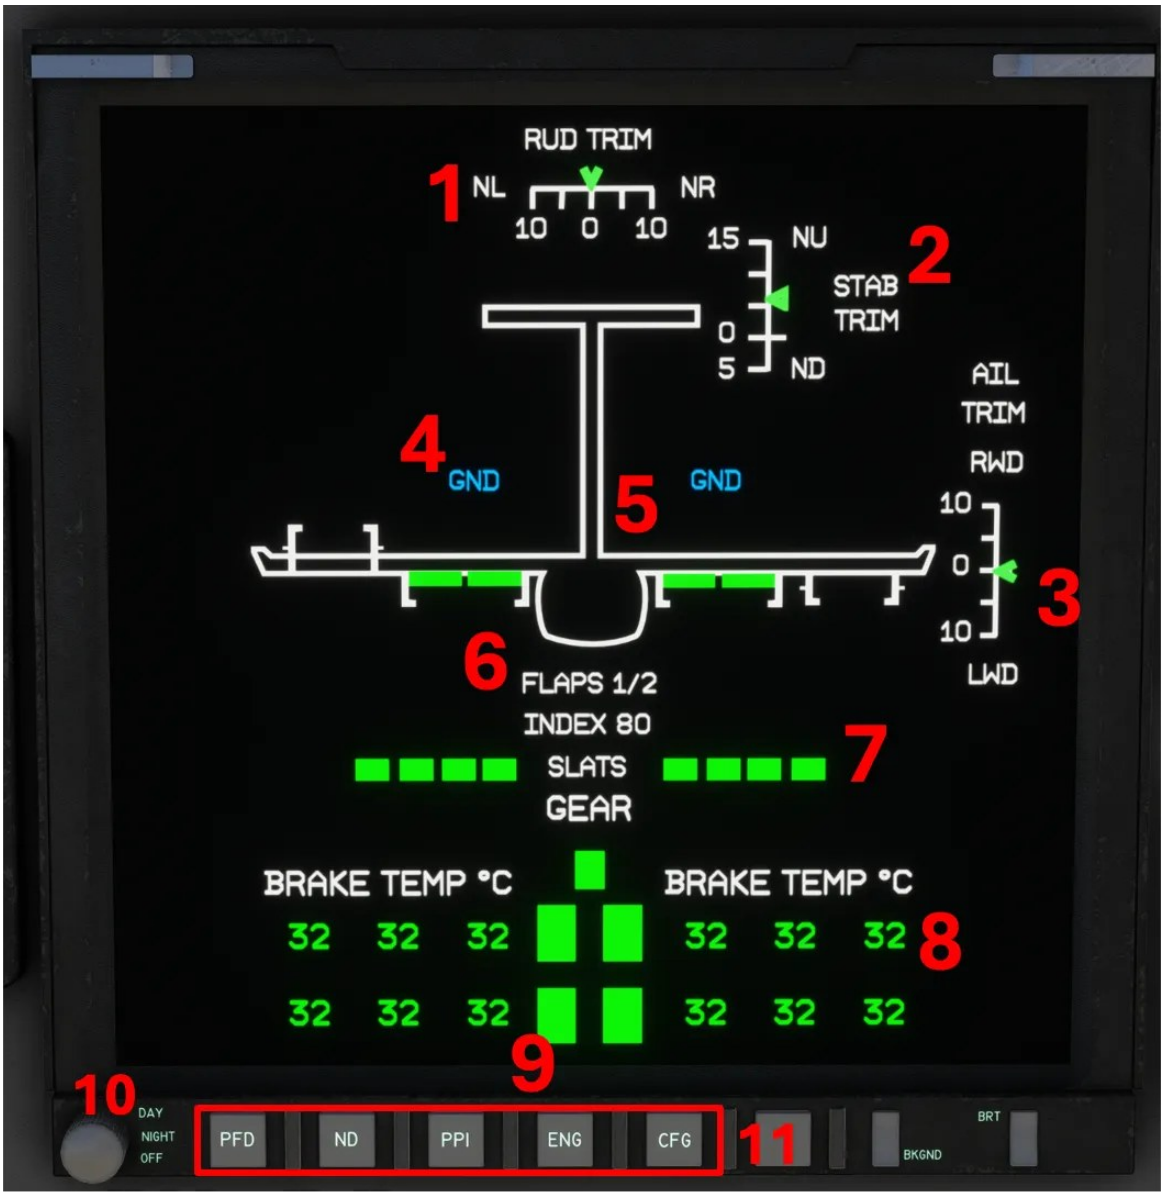

Configuration Display

1. **Rudder Trim Indicator**
2. **Stabilizer Trim Indicator**
3. **Aileron Trim Indicator**
4. **Spoiler Mode Indicator:** DLC Appears when spoilers are being used in the lift control mode during approach (Spoilers deployed and Flaps >1/2). SPD BR appears when spoilers are used in speed brake

mode (Spoilers deployed and Flaps <1/2). GND Appears when spoilers are used on the ground for full stop landings or touch and gos.

5. **Aircraft Control Panel:** Displays the position and deflection of all control surfaces against the aircraft outline.
6. **Flap Status Indicators:** Display flap readouts according to the flaps lever: UP, ½, ¾ and FULL
7. **Slat Status Indicator:** Indicates if Slats are extended or retracted.
8. **Brake Temperature Indicator:** in degrees Celsius
9. **Landing Gear Status Indicator**
10. ◇ **Screen Brightness Selector:** Cycles through display OFF/Night (Low Brightness Mode) and Day (High Brightness Mode).
11. ◇ **Multi-Function Display Selector:** Cycles through the different pages available on the MFD. First click on ENG will open the EPR Page, second click the extended Engine page and third the Engine Oil page.